



Find your niche



VERSATILE AND MODERN



ASSEMBLY INSTRUCTIONS

MIA RECLINING CHAIR

N2020LNTBK & N2050LNTBK

BEFORE YOU ASSEMBLE:

- Place all parts on a clean, smooth surface to avoid scratching the parts
- Check to be sure you have all parts and hardware
- Remove all wrapping materials, including any staples & packing straps
- Keep all hardware, small parts and packaging out of reach of children

IN THE BOX:

A: Wood Frame (2)



B: Stringer (2)



C: Back Frame (1)



D: Seat Frame (1)



E: Medium Bolt (4)



F: Small Bolt (2)



G: Long Bolt with Insert (4)



H. Threaded Flange (2)



I: Seat Cushion (1)



J. Allen Wrench (1)



K. Headrest



Find your niche



VERSATILE AND MODERN



ASSEMBLY INSTRUCTIONS

MIA RECLINING CHAIR

N2020LNTBK & N2050LNTBK

STEP 1

Attach Stringers (B) to Wood Frames (A). Remove Inserts from Large Bolts (G) and place Inserts into pre-drilled holes on Stringers (B) (See Figure 1.) Insert Large bolts (G) from outside of Wood Frames (A) and connect to Inserts using Allen Wrench (H). Please Note: Do not completely tighten bolts yet.

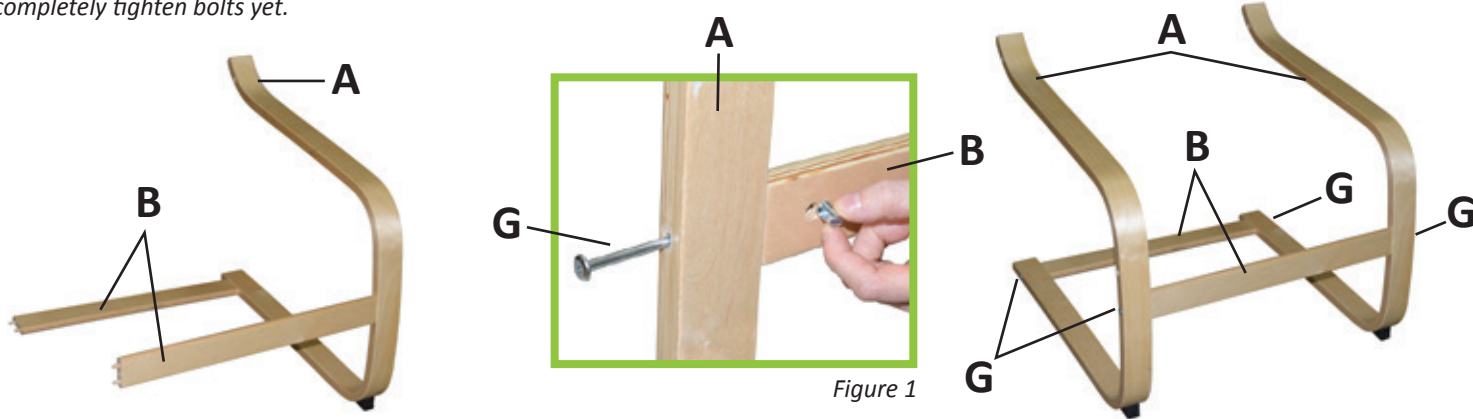


Figure 1

STEP 2

Attach Back Frame (C) to Seat Frame (D) using Small Bolts (F) and Threaded Flanges (H). Insert Small Screws (F) in the front of the chair, and Threaded Flanges (H) in the back. Tighten bolts with Allen Wrench (J). (See Figure 2.)

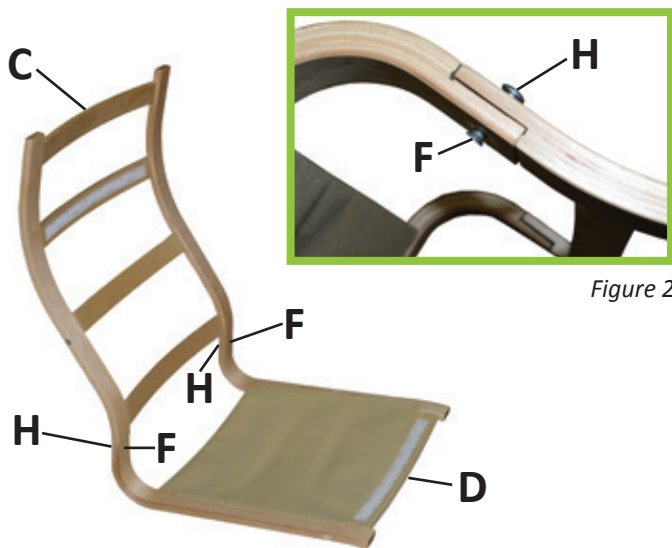


Figure 2

STEP 3

Attach assembled seat to completed frame with Medium Bolts (E). Insert Bolts from outside of Frame (A) and into Seat using Allen Wrench (J). After seat and frame are attached, completely tighten down all bolts using Allen Wrench (J).

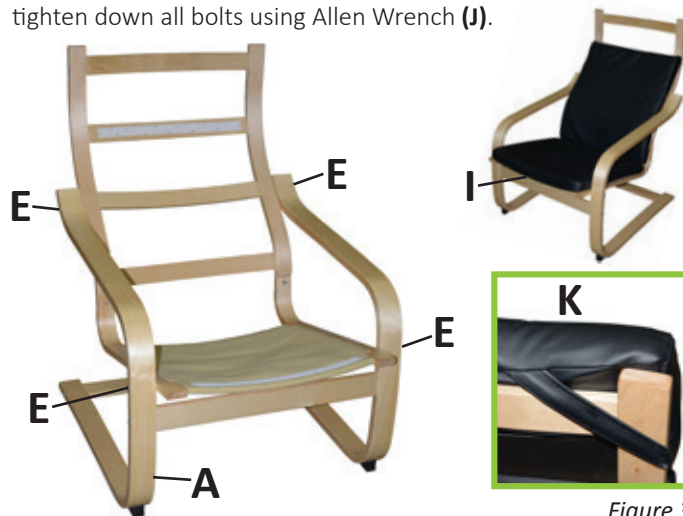


Figure 3

Next, place Seat Cushion (I) onto assembled frame and attach with velcro strips on back and seat. Then, attach Headrest (K) by wrapping straps around the assembled chair. (See Figure 3.)

Find your niche



VERSATILE AND MODERN



ASSEMBLY INSTRUCTIONS



MIA RECLINING CHAIR N2020LNTBK & N2050LNTBK

IN THE BOX

L: Cushion (1)



M: Stringers (2)



O: Long Bolt with Inserts (4)



N: Wood Frame (2)



P: Medium Bolts (4)



N2050LNTBK OTTOMAN



STEP 1

Attach Stringers (**M**) to Wood Frames (**N**). Remove Inserts from Large Bolts (**O**) and place Inserts into pre-drilled holes on Stringers (**M**) (See Figure 4.) Insert Large bolts (**O**) from outside of Wood Frames (**N**) and connect to Inserts using Allen Wrench (**J**). Please Note: Do not completely tighten bolts yet.


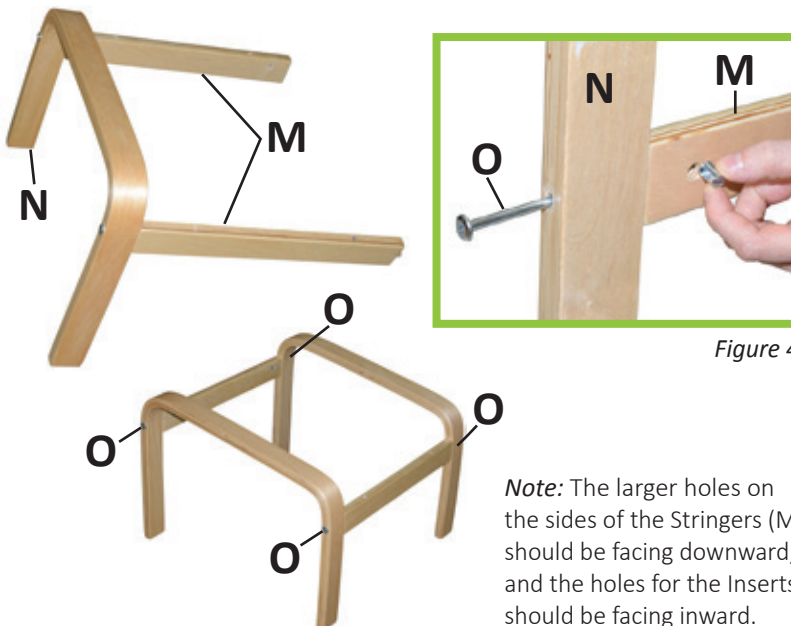


Figure 4

Note: The larger holes on the sides of the Stringers (M) should be facing downward, and the holes for the Inserts should be facing inward.

STEP 2

Attach Cushion (**L**) to assembled frame. Place cushion upside down and set frame on top. Line up holes on Stringers (**M**) with holes on Cushion. Insert Medium Bolts (**P**) into pre-drilled holes and attach with Allen Wrench (**J**).

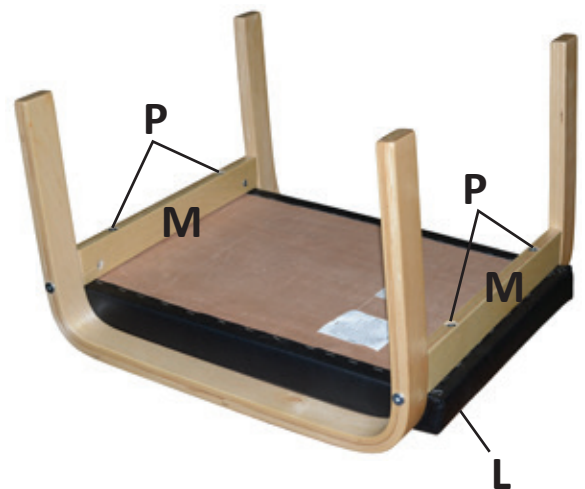

Finally, completely tighten all bolts with Allen Wrench (**J**).