



Findyourniche



VERSATILE AND MODERN



ASSEMBLY INSTRUCTIONS

SOHO DESK SHELL

NSDS4318

BEFORE YOU ASSEMBLE:

- Place all parts on a clean, smooth surface to avoid scratching the parts
- Check to be sure you have all parts and hardware
- Remove all wrapping materials, including any staples & packing straps
- Keep all hardware, small parts and packaging out of reach of children

IN THE BOX:

A: Leg


2 Pcs

B: Support Bar

2 Pcs

C: X-Wire

D: Desk Top

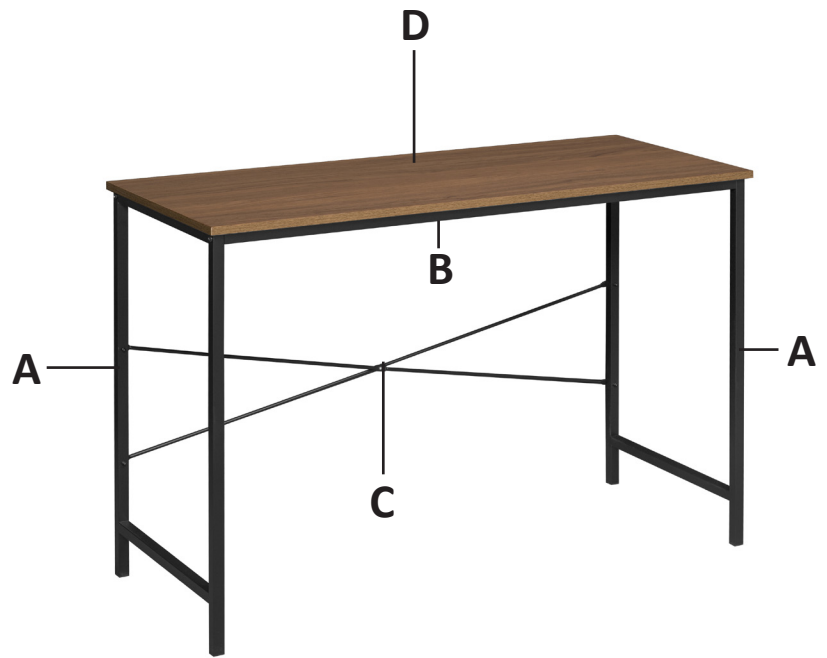

E: Long Screw

10 Pcs

F: Small Screw

4 Pcs

L: Screw Cap

4 Pcs

Findyourniche



VERSATILE AND MODERN



SOHO DESK SHELL

NSDS4318


ASSEMBLY INSTRUCTIONS

STEP 1A

Using **Long Screw (E)** connect **Leg (A)** to **Support Bar (B)**. Align pieces, and then insert **Long Screw (E)** through preexisting hole.

Note: Make sure the preexisting holes on **Support Bar (B)** are facing upwards.


Repeat this process and use a **Long Screw (E)** to connect the opposite side of the **Support Bar (B)** to the remaining **Leg (A)**.

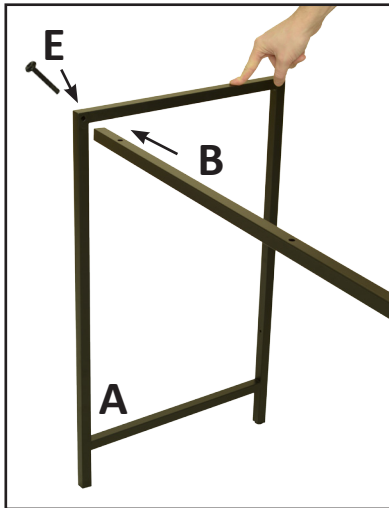

STEP 1B

Using **Long Screws (E)** connect **Leg (A)** to the remaining **Support Bar (B)**. Align pieces, and then insert **Long Screw (E)** through preexisting hole.

Note: Make sure the holes on the **Legs (A)** for Step 2 are on the same side of the assembly

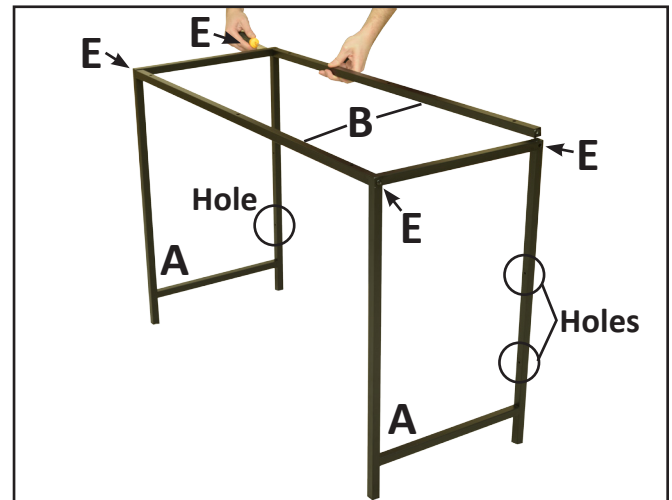

STEP 2

Attach **X-Wire (C)** to assembled frame by using both **Small Screws (F)** and **Screw Caps (G)**. Align **X-Wire (C)** with preexisting holes on the outside of your assembled frame, insert **Small Screws (F)** through the **X-Wire (C)** and attach **Screw Caps (G)** from the opposite side of the frame. See *Figure 1*.

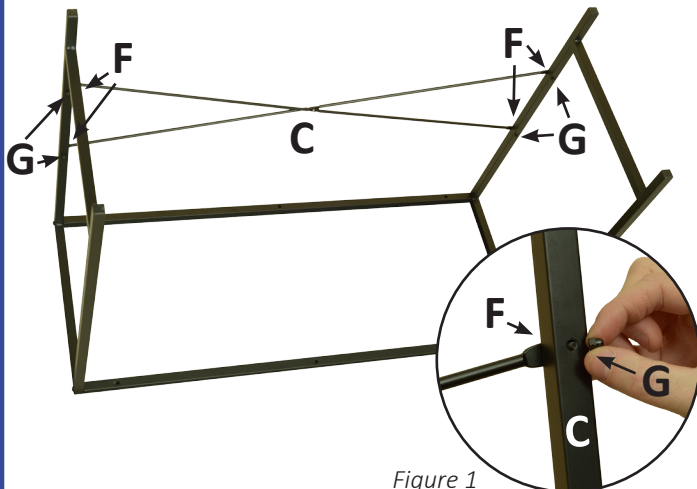


Figure 1

STEP 3

Attach assembled base to **Desk Top (D)** using **Long Screws (E)**. Align assembled frame with preexisting holes on **Desk Top (D)**, and screw into place.

